



A GIFT TO YOUR  
SENSES



SENSE & SMELL

20.02.2020



 **DOMUS**

Your linen soft  
and **scented**



SENSE & SMELL



 **DOMUS**

Your linen soft  
and **scented**




SENSE & SMELL







## DOSING IN THE TUMBLE DRYER

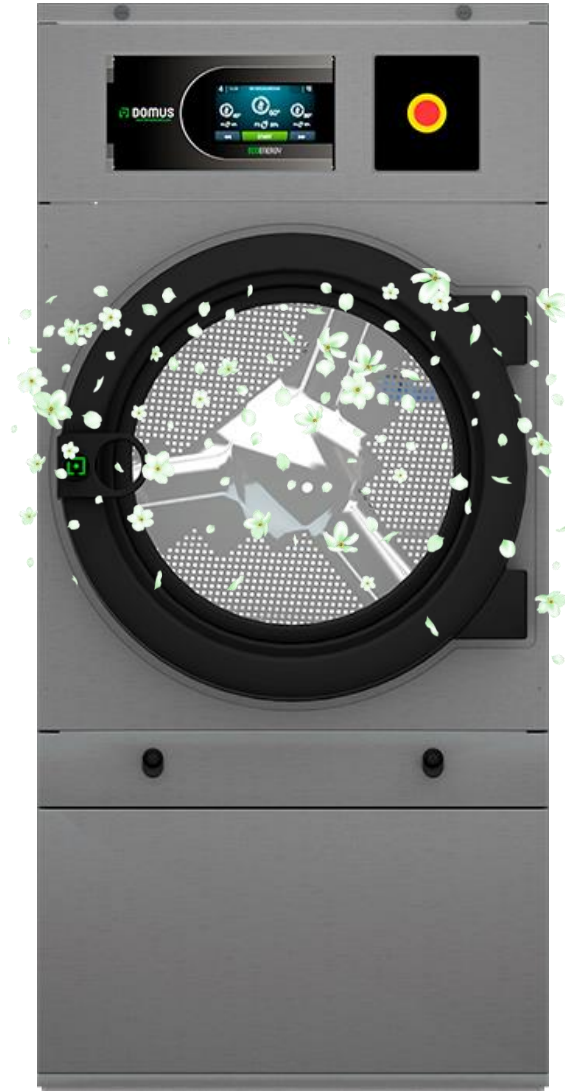



## EASY PROGRAMMING IN THE MICROPROCESSOR


 Programmable  
microprocessor  
**TOUCH II**

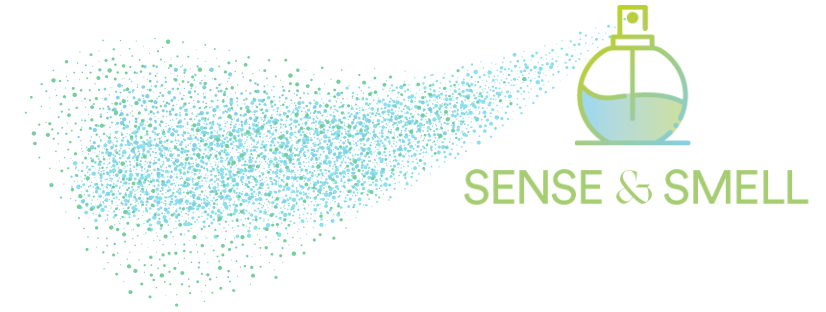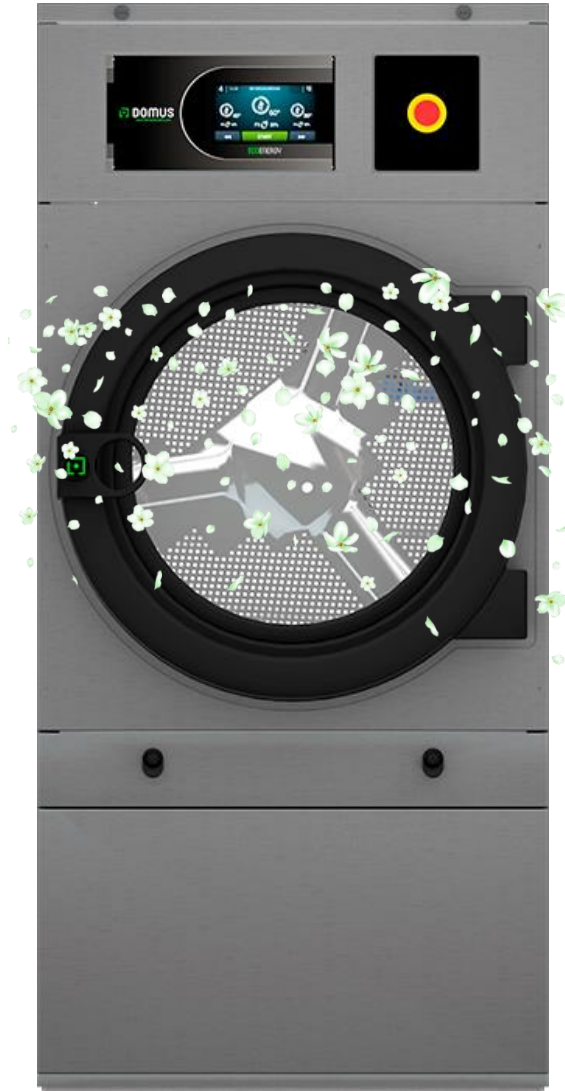



## TOUCH II

The dryer has some standard **programs and phases**:

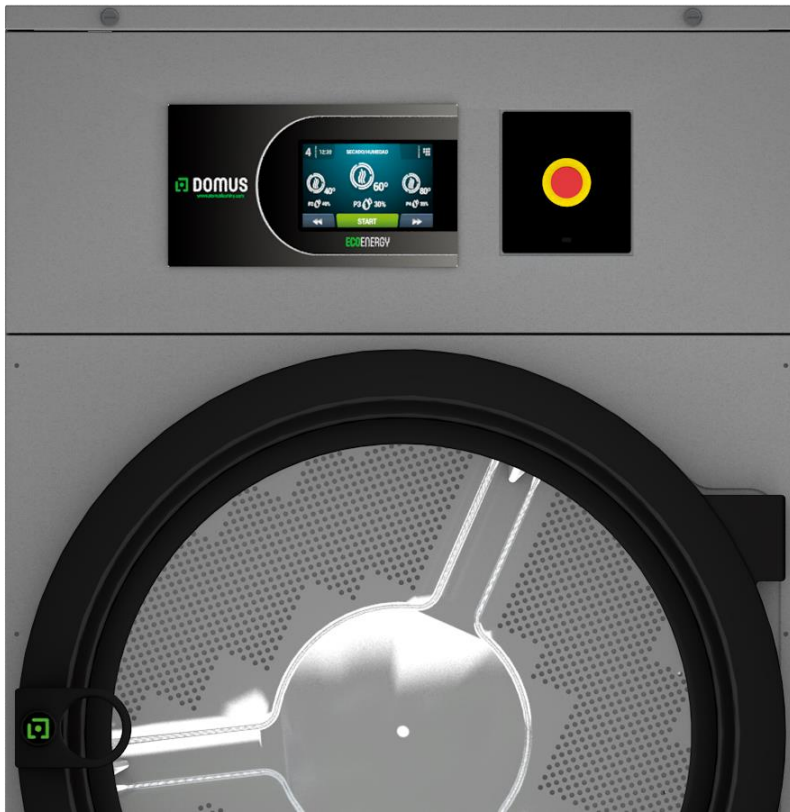

### STANDARD PROGRAMS WITH DOSING (+D)

NUMBER	PROGRAMME NAME
3	Cotton High Dry 75°C +D
5	Cotton Dry 75°C +D
14	Synth very Dry 65°C +D
16	Synth Dry 65°C +D
25	Delicate Dry 45°C +D
27	Delicate Low Dry 45°C +D
35	Air dry 25°C +D

### STANDARD PHASES

NAME OF PHASE	DOSING TARGET TEMP. °C	DOSING TIME sec	DOSING AGITATION TIME sec	REVERSE DRUM TIME sec	ROTATION SPEED
QUICK DOSING	50	3	60	30/30	Level 3
NORMAL DOSING	40	6	120	60/30	Level 3
EXTRA DOSING	40	9	180	90/30	Level 3



## COST AND CYCLE CALCULATIONS

With factory settings, we consider 2 dosing phases of 12" each for the coin laundry programs, so we have the following costs:



Cycle cost with 4 litres bottle = 0,15 Euros / cycle


The number of cycles using the whole pump flow (the flow can be reduced if wished):

Total of cycles with a 4 litres bottle = 192 cycles




# PROGRAMMING

TO CREATE A NEW PHASE

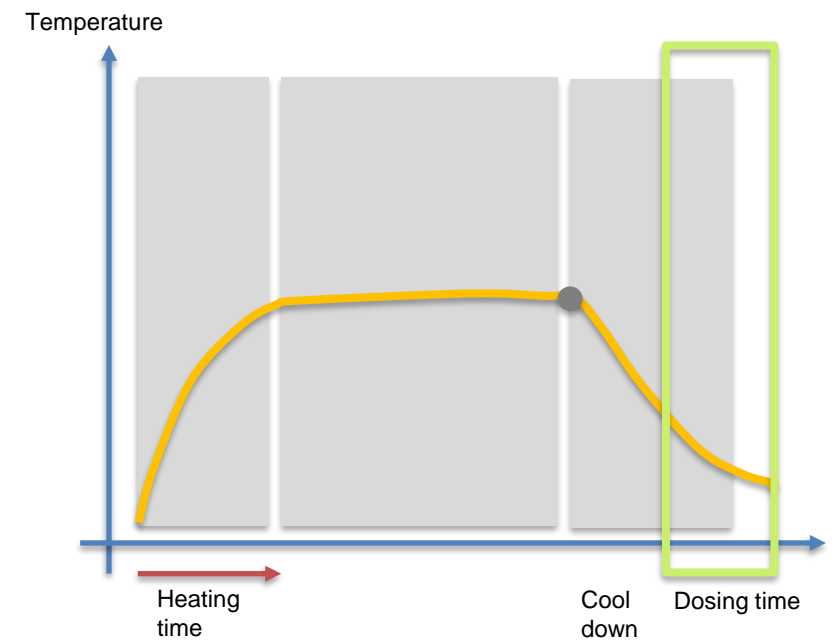



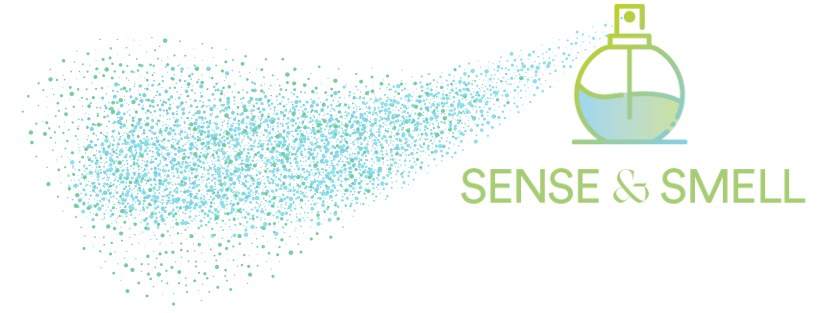

## TYPICAL DRYING CYCLE


WHAT CAN WE DO IN A DRYING PROGRAM?





## TOUCH II SCREEN

- Dosing phase screen

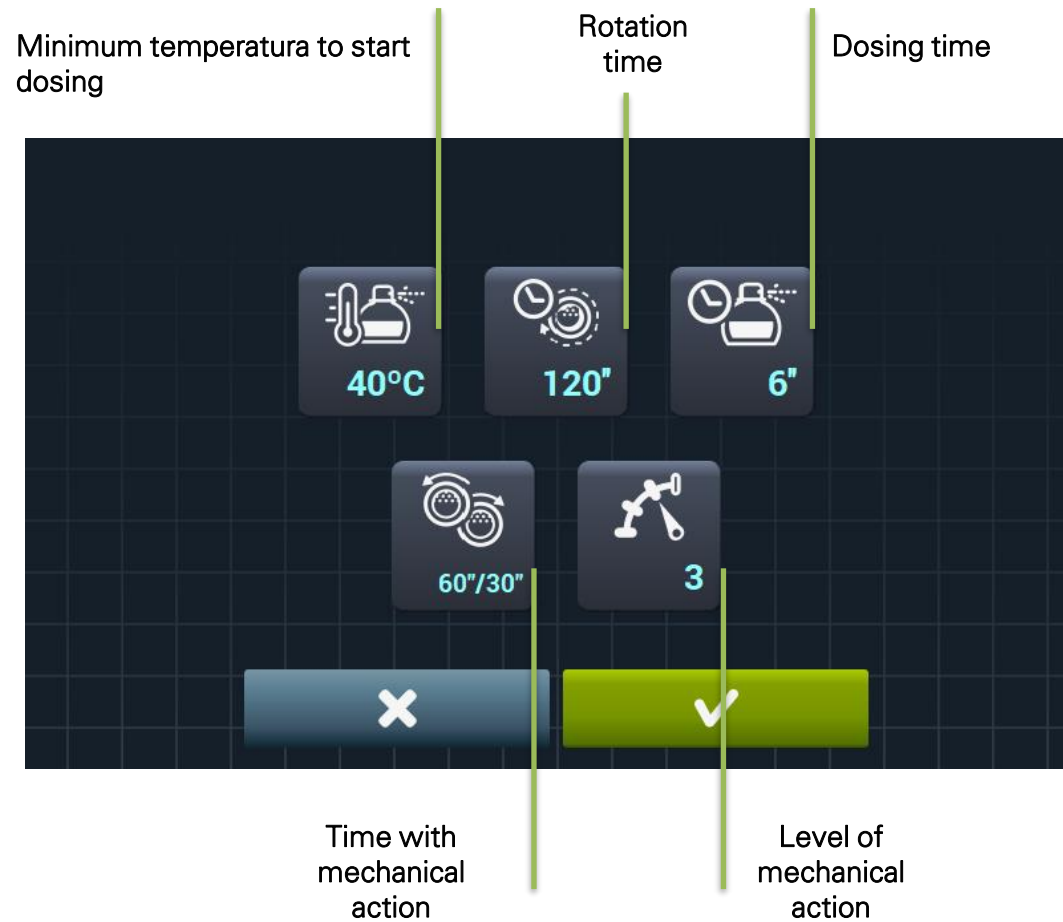



All type of  
clothing

Towels

Napkins

Bedsheets

Pillows

Bathrobes

Tablecloth

Garments






All type of  
sectors

Hotel  
Spa  
Care home  
Coin laundry  
Dry cleaner's  
Gym



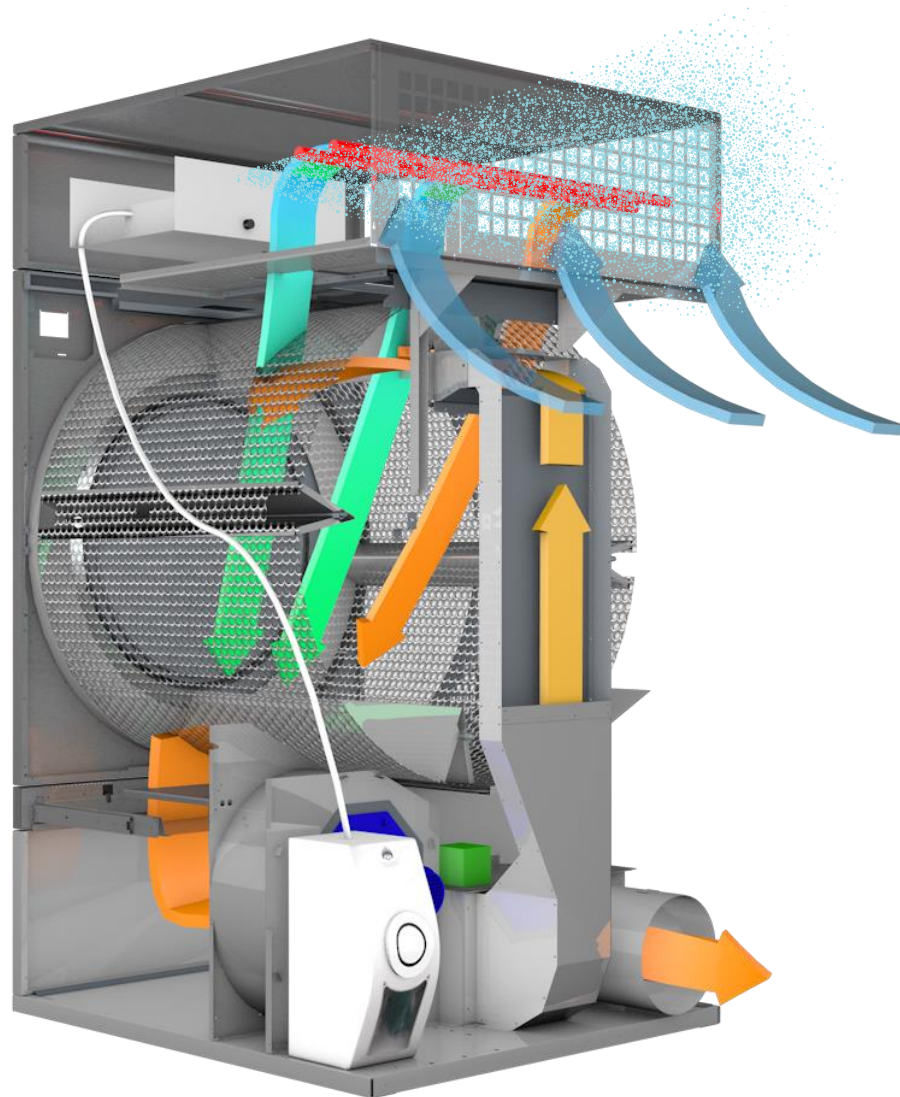


## HOW DOES IT WORK?

The perfume is vaporized by means of a spraying nozzle over the drum so it mixes with the incoming air, that impregnates the linen with perfume, as it goes through the drum.



## TECHNICAL FUNCTIONING:


The bag with perfume is installed in a small compartment inside the dryer, with easy access from the back of the dryer.

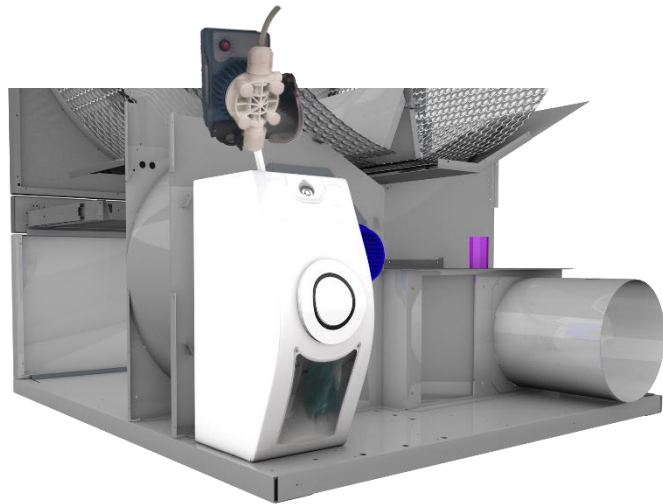



3 - Vaporizing nozzle

2 - Pump

1 - Compartment with perfume bag

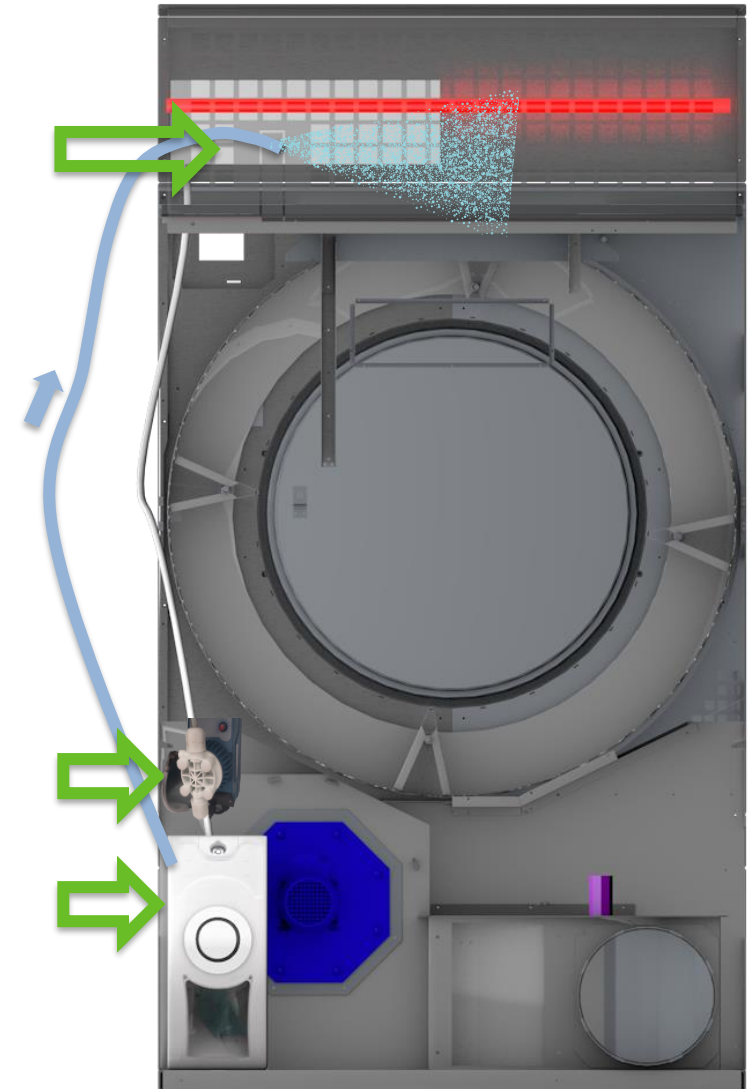


1 - In the compartment you can fit the 4 Lts. bottle.

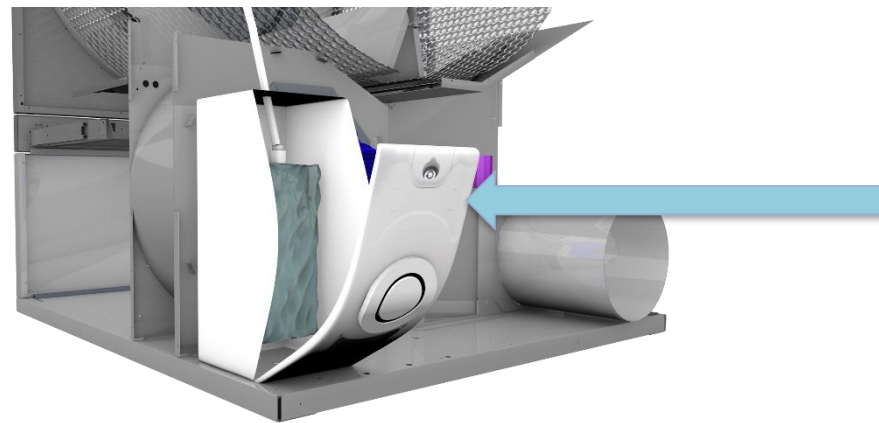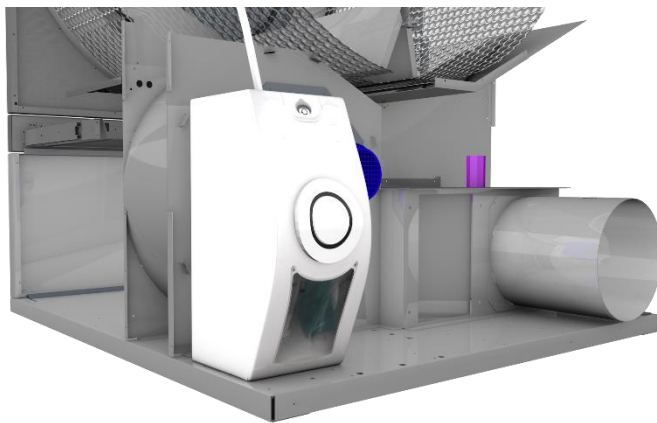

## CONSUMABLES:

- 4 litres bottle (easy fit in the dryer compartment)  
→ PURCHASE: Box with 3 bottles (3\*4 liters) = 12 lts.

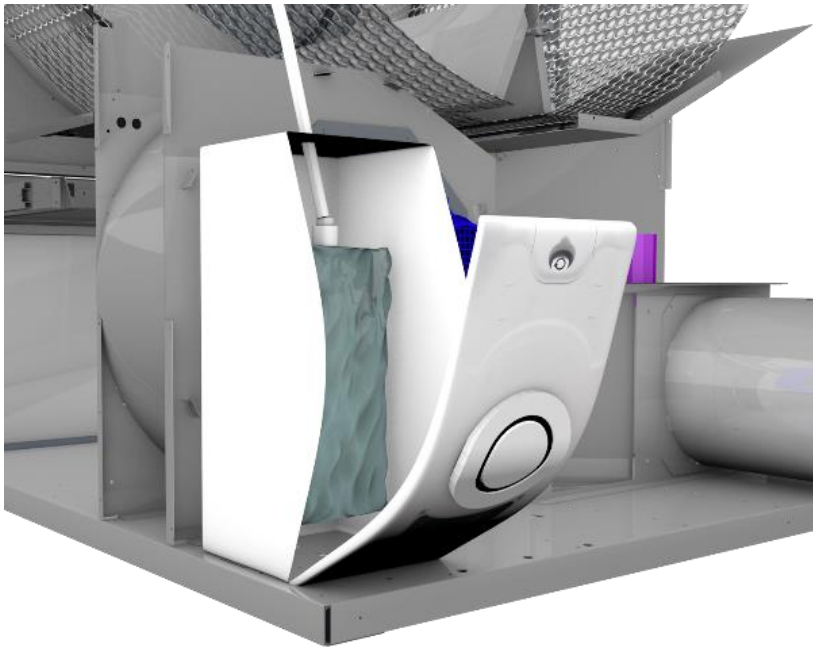



## REFERENCES: CONSUMABLES

REFERENCE	DESCRIPTOIN
12265313	ONNDRY 1 BOTTLE 4L (3u = 12litres)
12265315	ONNDRY 2 BOTTLES 4L (3u = 12litres)
12265317	ONNDRY 3 BOTTLES 4L (3u = 12litres)



## THREE FRAGRANCES (water base):

### ONNDRY SCENT 1

Aqueous textile perfume for dryers. Floral fragrance with fruit notes



### ONNDRY SCENT 2

Aqueous textile perfume for dryers. Fresh fragrance with citrus and floral notes



### ONNDRY SCENT 3

Aqueous textile perfume for dryers. Floral fragrance with spicy notes



## DOCUMENTATION

Each fragrance has one:

Technical datasheet and safety sheet.

**Safety data sheet**  
According to 1907/2006/EC (REACH), 2015/830/EU (THIS SDS IS JUST FOR INFORMATIVE PURPOSE. THE SDS SHALL BE SUPPLIED IN AN OFFICIAL LANGUAGE OF THE COUNTRY WHERE THE PRODUCT IS PLACED ON THE MARKET)

**PROQUIMIA**  
**ONNDRY SCENT 1**

**SECTION 1: IDENTIFICATION OF THE SUBSTANCE/MIXTURE AND OF THE COMPANY**

**1.1 Product identifier:** ONNDRY SCENT 1

**1.2 Relevant identified uses of the substance or mixture and uses advised against:**  
Relevant uses: Air freshener. For professional user/industrial user only.  
Uses advised against: All uses not specified in this section or in section 7.3

**1.3 Details of the supplier of the safety data sheet:**  
PROQUIMIA, S.A.  
Ctra. de priets,6  
08500 VIC - Barcelona - España  
Phone.: 938832353 - Fax: 938832050  
regulatory@proquimia.com  
http://www.proquimia.com

Distributed by:  
ONERA LAUNDRY BARCELONA S.A.  
Comerç. 6-12 Pol. Ind. La Quintana  
08504 Sant Julià de Vilatorrada, BCN - SPAIN  
T: +34 93 812 27 90 F: +34 93 812 27 95  
www.oneralaundrybcn.com

**1.4 Emergency telephone number:** Toxicology Information Service (National Institute of Science). Phone: +34 91 562 04 20. Information Only for the purpose of providing health response

**SECTION 2: HAZARDS IDENTIFICATION**

**2.1 Classification of the substance or mixture:**  
**CLP Regulation (EC) No 1272/2008:**  
Classification of this product has been carried out in accordance with CLP Regulation  
Aquatic Chronic 3: Hazardous to the aquatic environment, long-term hazard, Category 3

**2.2 Label elements:**  
**CLP Regulation (EC) No 1272/2008:**  
**Hazard statements:**  
Aquatic Chronic 3: H412 - Harmful to aquatic life with long lasting effects  
**Precautinary statements:**  
P102: Keep out of reach of children  
P273: Avoid release to the environment  
P501: Dispose of contents/container in accordance with regulations on hazardous waste packaging waste respectively  
**Supplementary Information:**  
ELH208: Contains 1-(1,2,3,4,5,6,7,8-octahydro-2,3,8,8-tetramethyl-2-naphthyl)ethyl butylbenzyl)propionaldehyde, Lysmeral extra, 4-tert-butylcyclohexyl acetate, Amyl aldehyde, Hexyl salicylate, Isoeugenol. May produce an allergic reaction

**2.3 Other hazards:**  
Product fails to meet PBT/vPvB criteria

**SECTION 3: COMPOSITION/INFORMATION ON INGREDIENTS**

**3.1 Substance:**  
Non-applicable

**3.2 Mixture:**  
**Chemical description:** Mixture of substances  
**Components:**

- CONTINUED ON NEXT PAGE -

Date of compilation: 27/07/2020 Version: 1

**Safety data sheet**  
According to 1907/2006/EC (REACH), 2015/830/EU (THIS SDS IS JUST FOR INFORMATIVE PURPOSE. THE SDS SHALL BE SUPPLIED IN AN OFFICIAL LANGUAGE OF THE COUNTRY WHERE THE PRODUCT IS PLACED ON THE MARKET)

**PROQUIMIA**  
**ONNDRY SCENT 1**

**SECTION 3: COMPOSITION/INFORMATION ON INGREDIENTS (continued)**

In accordance with Annex II of Regulation (EC) No 1907/2006 (point 3), the product contains:

Identification	Chemical name/Classification	Concentration
CAS: 6359-76-3 EC: 228-406-6 Index: Non-applicable REACH: 01-211983275-36-XXXX	<b>Hexyl salicylate</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Aquatic Chronic 1: H410; Skin Sens. 1B: H317 - Warning	Self-classified <b>&lt;5 %</b>
CAS: 80-54-6 EC: 201-289-4 Index: Non-applicable REACH: 01-2119907954-30-XXXX	<b>2-(4-tert-butylbenzyl)propionaldehyde, Lysmeral extra</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Acute Tox. 4: H302; Aquatic Chronic 3: H412; Repr. 2: H361; Skin Irrit. 2: H315; Skin Sens. 1B: H317 - Warning	Self-classified <b>&lt;5 %</b>
CAS: 122-40-7 EC: 204-341-6 Index: Non-applicable REACH: 01-2120743467-49-XXXX	<b>Amyl cinnamate</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Aquatic Chronic 2: H411; Skin Sens. 1B: H317 - Warning	Self-classified <b>&lt;5 %</b>
CAS: 54464-97-2 EC: 239-174-1 Index: Non-applicable REACH: Non-applicable	<b>1-(1,2,3,4,5,6,7,8-octahydro-2,3,8,8-tetramethyl-2-naphthyl)ethan-1-ol</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Aquatic Chronic 1: H410; Skin Irrit. 2: H315; Skin Sens. 1B: H317 - Warning	Self-classified <b>&lt;5 %</b>
CAS: 101-88-0 EC: 202-983-3 Index: Non-applicable REACH: Non-applicable	<b>Hexyl cinnam-aldehyde</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Aquatic Acute 1: H400; Aquatic Chronic 2: H411; Skin Sens. 1B: H317 - Warning	Self-classified <b>&lt;5 %</b>
CAS: 32210-23-4 EC: 250-954-9 Index: Non-applicable REACH: 01-2119976286-24-XXXX	<b>4-tert-butylcyclohexyl acetate</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Skin Sens. 1B: H317 - Warning	Self-classified <b>&lt;5 %</b>
CAS: 97-54-1 EC: 302-890-7 Index: 404-094-00-X REACH: Non-applicable	<b>Isoeugenol</b> <input type="checkbox"/> <b>H</b> Regulation 1272/2008 Skin Sens. 1A: H317 - Warning	ATP ATP13 <b>&lt;5 %</b>

Substances presenting a health or environmental hazard which meet criteria laid down in Regulation (EU) No. 2015/830

To obtain more information on the hazards of the substances consult sections 11, 12 and 16.

**SECTION 4: FIRST AID MEASURES**

**4.1 Description of first aid measures:**  
The symptoms resulting from intoxication can appear after exposure, therefore, in case of doubt, seek medical attention for direct exposure to the chemical product or persistent discomfort, showing the SDS of this product.  
**By inhalation:**  
This product does not contain substances classified as hazardous for inhalation, however, in case of symptoms of intoxication remove the person affected from the exposure area and provide with fresh air. Seek medical attention if the symptoms get worse or persist.  
**By skin contact:**  
This product is not classified as hazardous when in contact with the skin. However, in case of skin contact it is recommended to remove contaminated clothes and shoes, rinse the skin or if necessary shower the affected person thoroughly with cold water and neutral soap. In case of serious reaction consult a doctor.  
**By eye contact:**  
Rinse eyes thoroughly with water for at least 15 minutes. If the injured person uses contact lenses, these should be removed unless they are stuck to the eyes, in which case removal could cause further damage. In all cases, after cleaning, a doctor should be consulted as quickly as possible with the SDS for the product.  
**By ingestion/aspiration:**  
Do not induce vomiting, but if it does happen keep the head down to avoid aspiration. Keep the person affected at rest. Rinse out the mouth and throat, as they may have been affected during ingestion.

**4.2 Most important symptoms and effects, both acute and delayed:**  
Acute and delayed effects are indicated in sections 2 and 11.

**4.3 Indication of any immediate medical attention and special treatment needed:**

- CONTINUED ON NEXT PAGE -

Date of compilation: 27/07/2020 Version: 1 Page 2/11



## FREQUENTLY ASKED QUESTIONS



WHAT TYPE OF PRODUCT CAN WE DOSE?

Water based products.

WHAT TEMPERATURE IS THE BEST TO DOSE EFFICIENTLY?

We advise below 45°C

WHAT AMOUNT OF LIQUID SHOULD WE SPRAY? It depends on the concentration of perfume in the solution and the amount of smell that we want to impregnate in the clothes. The number of phases and dosing time can be programmed to adjust to the desired result. The amount of product will affect the amount of total cycles that we will get from each bag.

In our product tests we carry out a **minimum of 80 cycles for each liter** of product, with a very high degree of scent.

HOW MANY TIMES MUST WE DOSE FOR A GOOD RESULT? The standard programs give an idea, but with the **TOUCH II** it can be programmed, and since it is at the end of the cycle, when the door is opened the customer has total perception.



SENSE & SMELL

## DRYERS RANGE:

all industrial dryers  
with TOUCH II:

Single pocket  
Double pocket  
Heat pump

Not available in  
Heavy Professional  
dryers.



IT CAN BE INSTALLED IN ALL DRYERS IN THE MARKET  
WITH TOUCH II

### DOSING KIT:

It includes all the vaporizing system and the compartment for the bag/bottle. (Compartment set + pump + nozzle + assembly manual. )

(It does not include the bottle of perfume, see parts reference)

DOSING KIT REF.	
MODEL	REFERENCE
DRYER 11/14/18	19072517
DRYER 23	19080908
DRYER 28/36	19080909
DRYER 45/60/80	19080910
STACK DRYER	19080911



# DOMUS

## LABEL:

To identify the dryers with this option installed.





SENSE & SMELL



## INSTALLATION

Distance from the back wall to change the perfume bag / bottle.

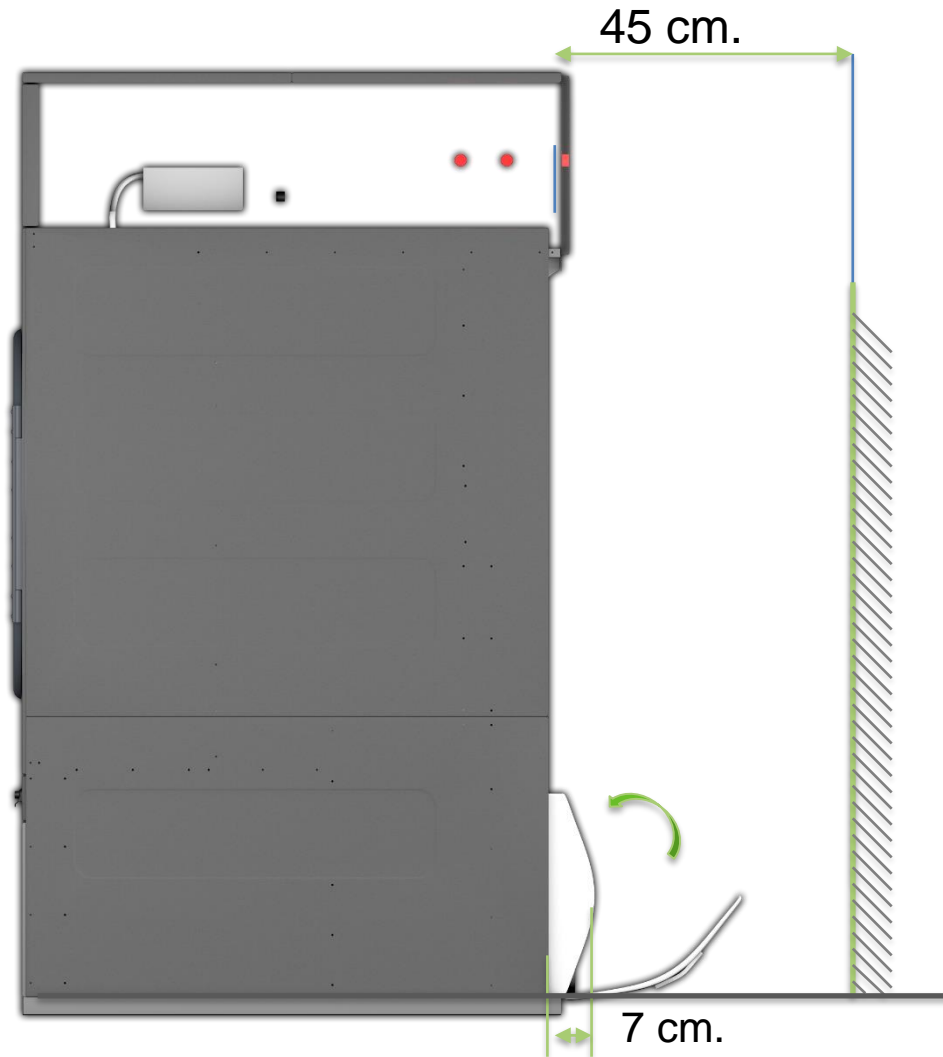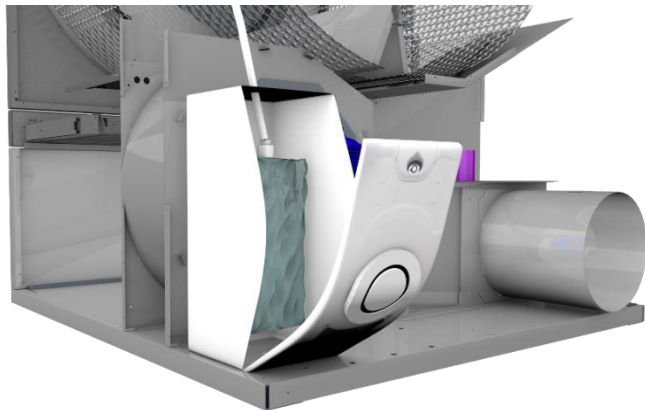





# A GIFT TO YOUR SENSES

[export@domuslaundry.com](mailto:export@domuslaundry.com)

